

Heater[™] Sandlot

Read This Before Operating

IMPORTANT

**DO NOT RETURN THE SANDLOT MACHINE TO THE RETAIL STORE WHERE PURCHASED.
CALL TOLL FREE: (800) 492-9334.**

WARNING: ONLY USE SANDLOT LITE-BALLS IN THE SANDLOT MACHINE

The Sandlot Lite-Ball Pitching Machine uses Sandlot Soft Lite-Balls and Sandlot Regular Lite-Balls. If you put real baseballs in the Sandlot Lite-Ball Machine you will damage the machine and void the Sandlot warranty. Heater Sports recommends using official Sandlot Lite-Balls in your Sandlot Lite-Ball Pitching Machine. These balls are incredibly accurate, long lasting, and produce the best performance in the machine.

CUSTOMER SERVICE

HEATER SPORTS is dedicated to your customer satisfaction. If you experience any trouble with the operation of the Sandlot Pitching Machine contact us at: (800) 492-9334 or log on to our website at <http://www.HeaterSports.com>.

 
WARNING: THIS PRODUCT IS TO BE USED BY ADULTS ONLY. MAKE SURE MACHINE IS TURNED OFF BEFORE ASSEMBLY! KEEP HANDS AND ALL BODY PARTS AWAY FROM BALL ENTRY AND EXIT! SERIOUS HAND, EYE, AND BODILY INJURY MAY OCCUR IF USED INCORRECTLY!

- Please be sure to read all of the instructions before using the Sandlot Lite-Ball Pitching Machine to insure the machine is working properly.
- Parents: Your child should be made aware of the potential dangers of using the Sandlot Lite-Ball Pitching Machine.
- Never put your fingers into the Sandlot Lite-Ball Pitching Machine.
- The Sandlot is not a toy and an adult should supervise children. It is very important the batter makes sure the area is clear before swinging a bat.
- Stay clear of the ball opening while the Sandlot is operating. Although the balls are very light, they may cause eye damage or other injury may occur. Children must be advised of this danger and appropriate precautions should be taken.
- **DO NOT** use any type of ball other than Sandlot Lite-Balls in this machine.
- Always use a NOCSE approved batting helmet when batting.
- **DO NOT LOOK INTO THE FRONT OF THE MACHINE WHILE THE SANDLOT IS RUNNING.** Occasionally a ball may get stuck in the machine. The ball may pause and then shoot out and cause eye injury. If the ball gets stuck, turn off the machine immediately. You should be able to remove the ball easily by tilting the Sandlot backwards to eject the ball.
- Never operate in water or moisture.
- Always store in a dry area.

SANDLOT PARTS LIST





Housing (Qty 1)


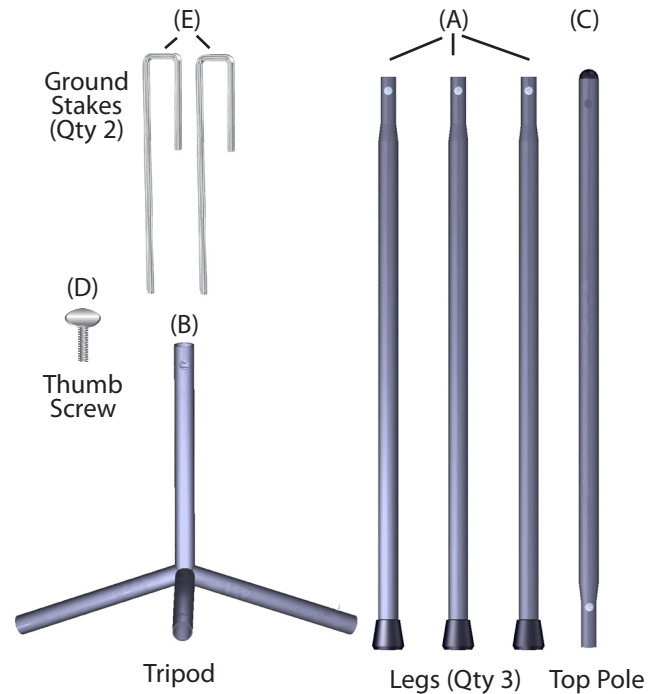


SANDLOT ASSEMBLY INSTRUCTIONS

  STEP 1: Slide Legs (A) into Tripod (B) base until push-pin snaps into place.

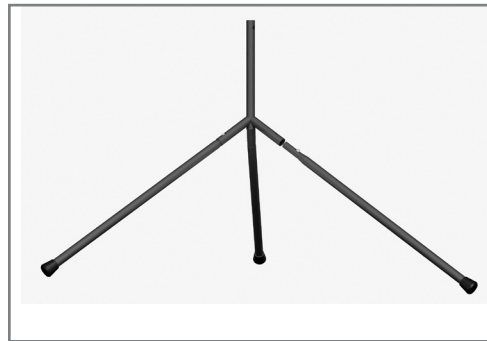
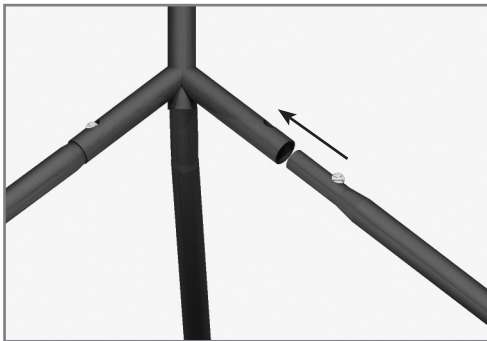


  STEP 2: Insert Top Pole (C) into Tripod (B) top until push-pin snaps into place. Thread Thumb Screw (D) into threaded nut attached to opposite side of the push-pin hole.

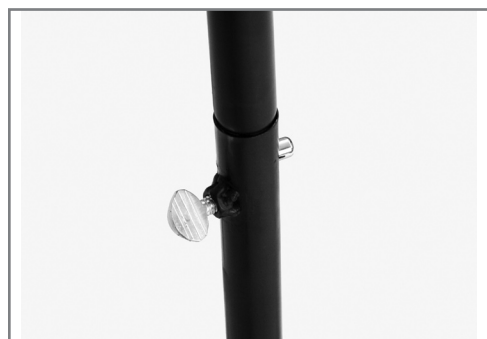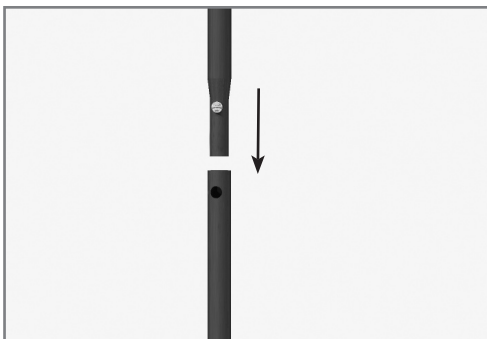


SANDLOT ASSEMBLY (Continued)

  STEP 3: Remove Nut, Thumb Knob & Washers from Clamp assembly on Housing. Slide the support brace off of the clamp bolts.

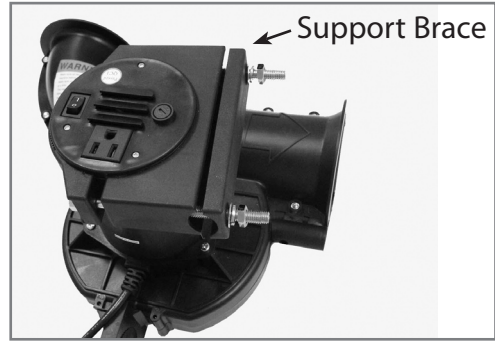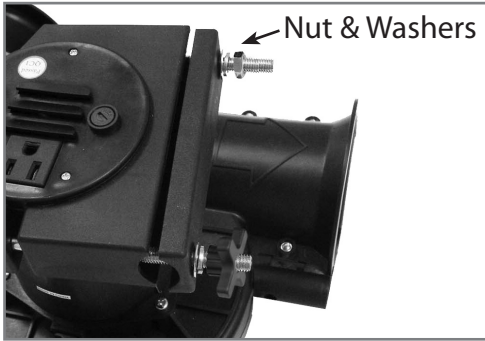

 STEP 4: Insert the Clamp Bolts through the holes located near the top of the Top Pole (C) and place the washer, lock washer and nut back on the top bolt & the washer, lock washer and thumb knob on the bottom bolt (in that order).

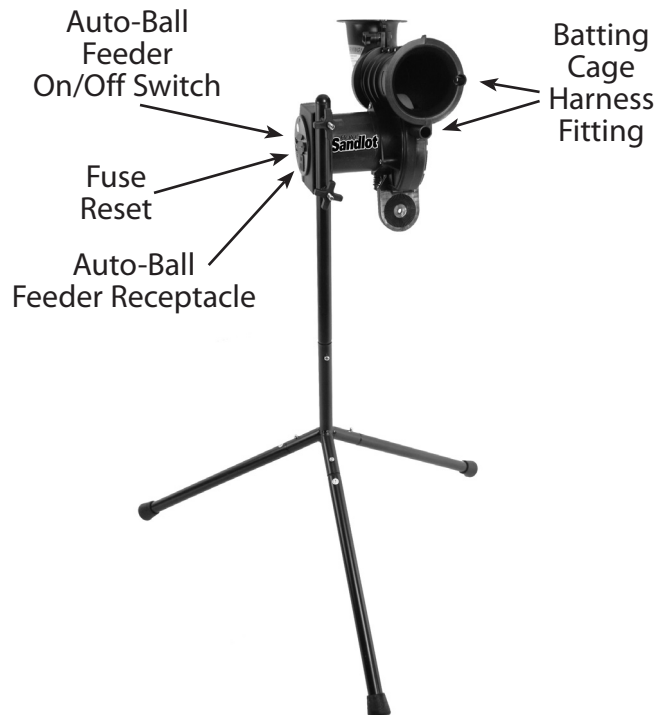

Heater™ Sandlot

OPERATION INSTRUCTIONS

WARNING!

MAKE SURE NO PERSONS ARE IN FRONT OF MACHINE WHILE ADJUSTING THE MACHINE FOR FAST BALLS, POP FLIES, OR GROUNDERS.

CAUTION:

Different types of balls will change the pitch dramatically. Make sure no persons are in front of machine until machine is aimed properly and pitching accurately at desired target.

STEP 1: Before using the Sandlot pitching machine, use the two Ground Stakes (E) to secure the machine in place,

STEP 2: Plug the Sandlot into any standard wall outlet and allow the motor to get to full speed then place a lite-ball into the elbow chute.

To adjust the pitch, loosen the thumb knob on the bottom clamp bolt until the housing can pivot to the desired position.

Securely tighten the thumb knob back into place.

STEP 3: To adjust for different ball speeds simply move the Sandlot closer or further away from the hitter.

STEP 4: To throw pop flies or grounders, loosen the thumb knob on the clamp support until the housing can rotate to the desired position.

Securely tighten the thumb knob back into place.

