Heater Team Model: BBF79 BLAZE BALLEBEDER PARTS LIST



ASSEMBLY INSTRUCTIONS *Note: Feeder Arrives in 9" Setting.



Step 1: Slide the Top Spiral (A) onto the Bottom Spiral (B).

Step 2: Attach the Feeder Port (C) to the Housing using the pre-assembled bolt, washers, and knob. Tighten knob when feeder port is straight up and down (Don't tighten if port is tilted back or forward).

NOTE: Ensure that the Housing Mount sits securely between the Feeder Port pillars.

Step 3: Slide the assembled section onto the Feeder Port (C).

Step 4: With the machine powered off, plug the power cord into the side of the machine. When powered on, balls will begin to feed into the machine automatically. Always ensure the ball path is clear before loading balls, as failure to do so could result in serious injury or damage.



Option 1: 12" Softball Setting No spacers required.



Option 2: 11" Softball Setting Use (D) Narrow Spacer Only



Option 3: Baseball Setting Use Both Spacers (D & E)

WARNING: PITCHING MACHINES ARE TO BE USED BY ADULTS ONLY. MAKE SURE THE MACHINE IS TURNED OFF BEFORE ASSEMBLY! KEEP HANDS AND ALL BODY PARTS AWAY FROM BALL ENTRY AND EXIT! SERIOUS HAND, EYE, AND BODILY INJURY MAY OCCUR IF USED INCORRECTLY!

95 West 650 South • St. George, Utah 84770 • PH: 800-492-9334 • PH: 435-656-1756 • Fax: 435-688-0741