

Heater[®] Power Play[™]

Wireless Remote Control Outlet

**** Product is pre-programmed and ready to use ****

SPECIFICATIONS

Grounded Outlet
125V 60Hz 15A 1875W
Remote Range: 30meters
433.92 Hz Frequency

HOW TO USE

1. Plug the receiver into a wall socket (Electrical Power)
2. Plug devices into the receiver
3. Install a 12V 23A battery into remote controller
4. Press [ON / OFF] buttons on the remote controller to turn on&off devices

TRANSMITTER PAIRING

Note: Your transmitter and receiver contained in the package are pre-programmed and ready to use. Pairing is only required for using additional transmitters.

Please follow the directions below to pair a new transmitter to your receiver

1. Plug receiver to a wall socket (AC Power)
2. Press and hold the power button on the receiver for 3 seconds, the led indicator will begin to flash slowly
3. On your transmitter, press [ON] wait 2 seconds and then press [OFF]. The led indicator will now stop flashing
4. You have successfully paired the transmitter to your receiver

RESETTING THE UNIT

You can reset and remove all paired transmitters on your receiver by doing the following:

1. Press and hold the ON/OFF button on the receiver for 5 seconds until the led indicator flash from slow to fast mode, release the ON/OFF button for 1 second and press the button on the receiver once again to confirm reset. The led indicator will be OFF.

2. Your unit has now been resetted and does not have any paired transmitters. (Note: After reset, pairing is required to use the transmitter shipped in this package)

BATTERY INFORMATION AND REPLACEMENT

The remote control uses a 12V 23A battery.

1. Slide off the battery compartment
2. Install a 12V 23A Battery

[Make sure to match up the + and - Polarity markings]

3. Slide the compartment back in

[Testing: Press the ON and OFF buttons to make sure the LED indicator lights up]



NOTE:

SUITABLE FOR INDOOR AND DAMP LOCATIONS, NOT FOR WATER IMMERSION OR FOR USE DIRECTLY EXPOSE TO WATER ! INSTALL THE CORD AND UNIT ABOVE GROUND LEVEL AT LEAST 1.4M WITH THE RECEPTACLE FACING DOWNWARD !

Troubleshooting Tips:

Problem	Solution
The receiver doesn't turn on	Make sure the AC power cord is securely plugged into an AC power outlet. Unplug the unit for a moment and then plug in back again. Check the outlet by plugging in another device.
The remote doesn't work	Make sure the battery is fresh. Stand closer to the receiver. Remote range is about 30meters. Doors or Walls will reduce the remote distance

Battery Handling and Usage:

WARNING: Keep batteries away from children and pets

- Follow the battery manufacturer's safety and usage instructions
 - Insert the battery observing the proper polarity (+/-) as indicated inside the Battery Compartment
- CAUTION: Failure to properly align the battery polarity can cause personal injury and/or proper damage
- Remove spent or discharged battery from the product. Remove the battery when not using the product for an extended period
 - Never throw batteries into a fire. Do not expose batteries to fire or other heat sources
 - Dispose or recycle spent/discharge batteries in compliance with all application laws. For detailed information, contact your local solid waste authority

Model# BFR2499
Heater Sports
www.HeaterSports.com
1-800-492-9334