

Heater® Flop-Top Flex-A-Tee®

**The Only Travel Tee That Flops Away From Your Bat
& Resets With Every Hit**

INSTRUCTIONS

CAUTION

 
Read all warnings and instructions in this manual before using this equipment. Keep this manual for future reference.

IMPORTANT - DO NOT RETURN THIS PRODUCT TO THE RETAIL STORE WHERE YOU PURCHASED IT. IF YOU NEED ASSISTANCE OR PARTS PLEASE CALL TOLL FREE: 1-800-492-9334

WARNING

Improper use of this product can result in serious injury. Read and follow these instructions for proper and safe use of the Flop Top Flex-A-Tee. Always wear a helmet with a guard. Adult supervision is required. Inspect the tee top, tee stem, tripod base and adjustment knob before each use for evidence of damage. Keep the area clear in front of the tee and around the swinging area of the batter.

Model No. FTBT2499TT
Flop Top Flex-A-Tee

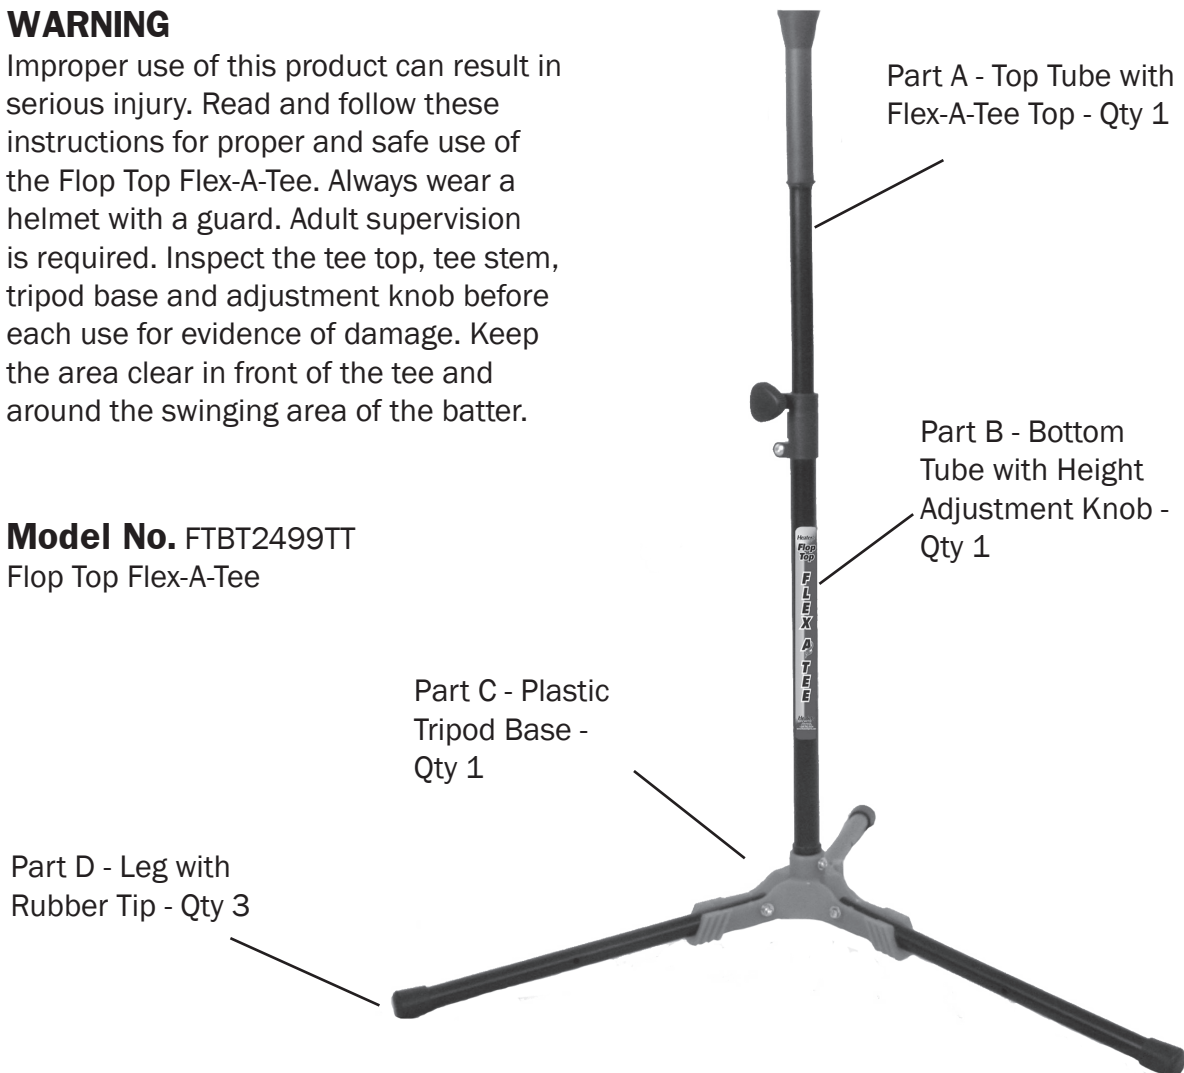

PART LIST - Model No. FTBT2499TT

If You Are Missing Any Parts, Please Call Toll Free
1-800-492-9334



Part A - Top Tube with
Flex-A-Tee Top - Qty 1



Part B - Bottom
Tube with Height
Adjustment Knob - Qty 1



Part C - Plastic Tripod Base - Qty 1



Part D - Leg with Rubber Tip - Qty 3



Part# E
Bolts - Qty 4



Part# F
Flat Washer - Qty 7



Part# G
Lock Washer - Qty 4

 


Part# H
Acorn Nut - Qty 4

HOW TO ASSEMBLE

Step 1 - Slide Part B (Bottom Tube with Height Adjustment Knob) into the Top of Part C (Plastic Tripod Base) and Align the Holes in Part B & Part C.


Step 2 - Insert Part E (Bolt) through the Tripod, then through the Pole. Add Part F (Flat Washer), then Part G (Lock Washer), then Twist Part H (Acorn Nut) into place on the end of the bolt & tighten.

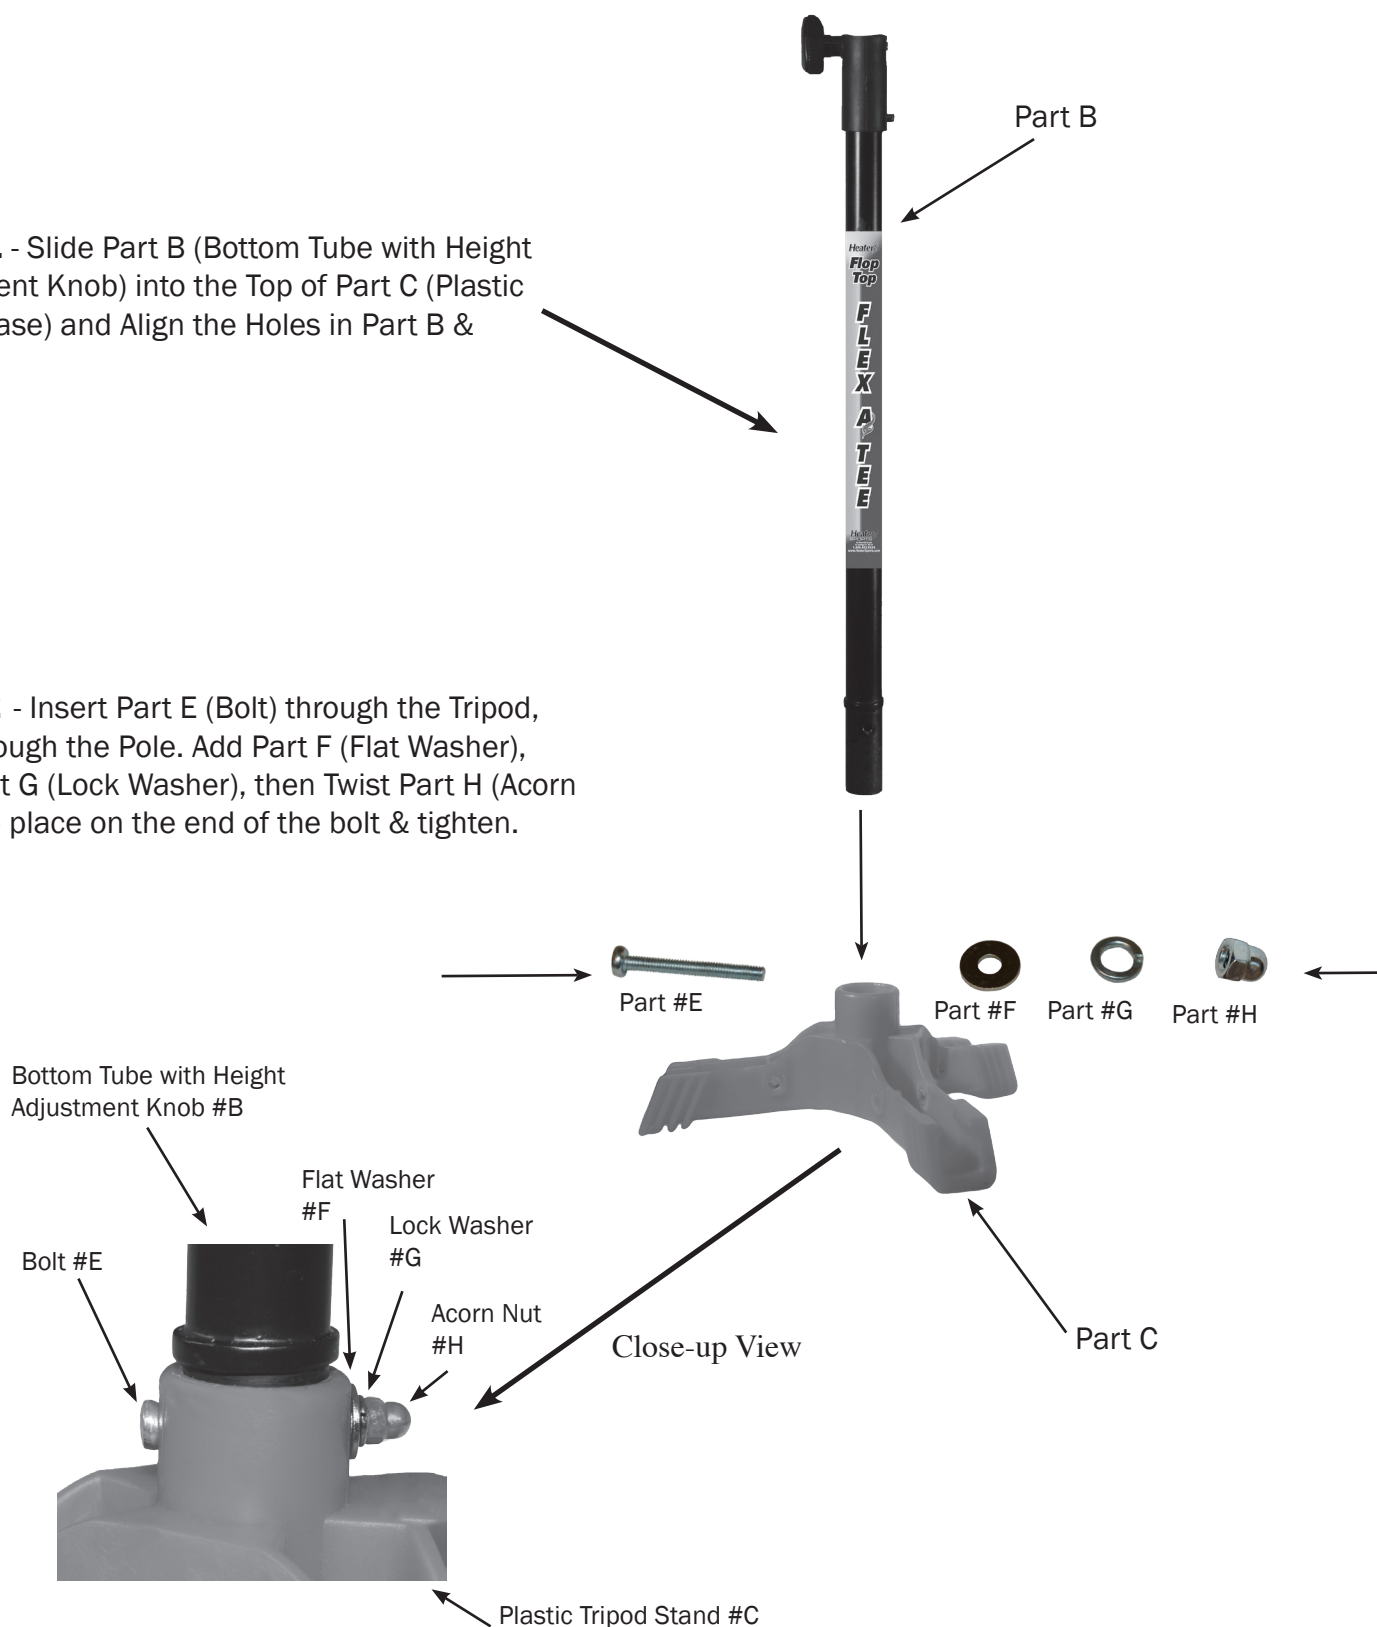


HOW TO ASSEMBLE (Cont.)

Step 3 - Slide Part D (Leg with Rubber Tip) into Part C (Plastic Tripod Base) line up the holes in Part C & Part D.

 Step 4 - Slide Part F (Flat Washer) onto Part E (Bolt). Slide Part E & F (Bolt with Flat Washer) through the holes in Part C & Part D (Leg and Plastic Tripod Stand). Slide Part F (Flat Washer), then Part G (Lock Washer), then Twist Part H (Acorn Nut) into Place and Tighten.

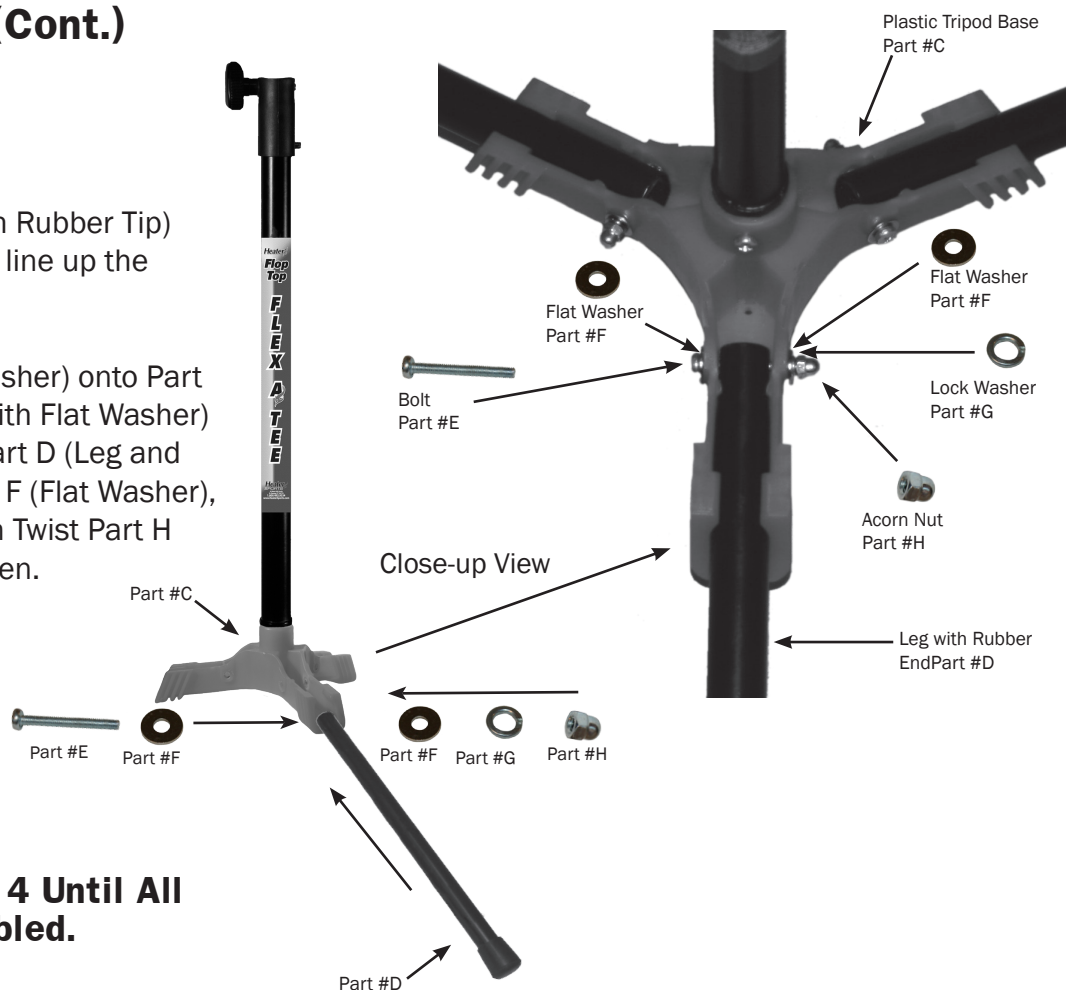

 Note: Repeat Step 3 & 4 Until All Three Legs Are Assembled.

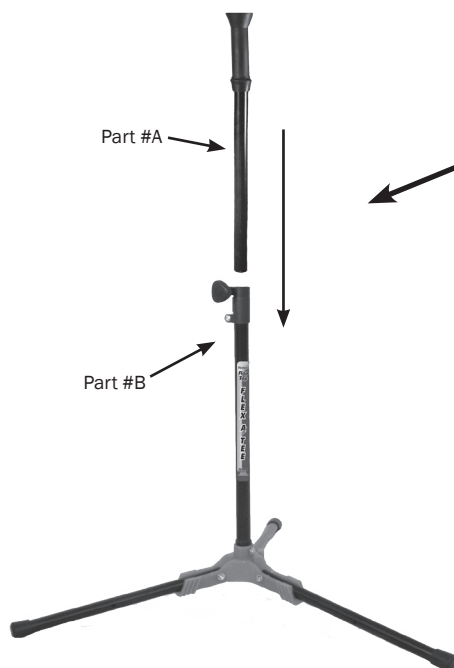

Step 5 - Slide Part A (Top Tube with Flex-A-Tee Top) Into Part B (Bottom Tube & Tripod). Loosen or Tighten the Height Adjustment Knob for desired Height.

How to Fold for Easy Storage -

Slide Part A (Top Tube with Flex-A-Tee Top) all the way into Part B (Bottom Tube with Height Adjustment Knob), Tighten Knob to Lock into Place. Lift Each Part D (Leg) out of the Plastic Tripod and up to Part B (Bottom Tube Height Adjustment Pole), Repeat for each Leg for Quick & Easy Portability.

