

Heater[™] PowerAlley **REAL-SOFTBALL PITCHING MACHINE**

MODEL# PASOFT199

Read This Before Operating

IMPORTANT

**DO NOT RETURN THE POWERALLEY MACHINE TO THE RETAIL STORE WHERE PURCHASED.
CALL TOLL FREE: (800) 492-9334.**

WARNING: USE REAL 11" SOFTBALLS AT YOUR OWN RISK

It is recommended that you only use dimpled pitching machine 11" softballs to pitch to batters. Pitching machines that use a wheel to throw softballs may throw softballs inaccurately because of the seams on the softball and could hit a batter, causing physical injury.

For the PowerAlley 11" Softball Machine, the recommended dimpled softball is the **Heater 11" Softball (Model# PMB34)**. These balls weigh the same as a seamed softball, are incredibly accurate, long lasting, and produce the best performance in the machine.

The recommended lite-softball is the **PowerAlley 11" Lite Ball (Model# HSW11SB)**. These balls weigh half of much as a seamed softball, are incredibly accurate, long lasting, and produce the best performance in the machine. Use these balls indoor & out.

WARNING: THIS PRODUCT IS TO BE USED BY ADULTS ONLY. MAKE SURE MACHINE IS TURNED OFF BEFORE ASSEMBLY! KEEP HANDS AND ALL BODY PARTS AWAY FROM BALL ENTRY AND EXIT! SERIOUS HAND, EYE, AND BODILY INJURY MAY OCCUR IF USED INCORRECTLY!

- **DO NOT LOOK INTO THE FRONT OF THE MACHINE WHILE THE POWERALLEY IS RUNNING.**
A ball may get stuck in the machine. The ball may pause and then shoot out and cause eye injury. If the ball gets stuck, turn off the machine immediately. You should be able to remove the ball easily by tilting the PowerAlley backwards to eject the ball.
- **NEVER OPERATE IN WATER OR MOISTURE.**
- **ALWAYS STORE IN A DRY AREA.**
- **READ ALL INSTRUCTIONS BEFORE USING THE MACHINE TO INSURE IT IS WORKING PROPERLY.**
- **PARENTS:** Your children should be made aware of the potential dangers of using this machine.
- **NEVER PUT HAND/FINGERS INSIDE THE POWERALLEY 11" SOFTBALL MACHINE.**
- **THIS MACHINE IS NOT A TOY. AN ADULT SHOULD SUPERVISE CHILDREN WHILE IN USE.**
- **ALWAYS USE NOCSE APPROVED BATTING HELMET WHEN BATTING.**

CUSTOMER SERVICE

HEATER SPORTS is dedicated to your customer satisfaction. If you experience any trouble with the operation of the PowerAlley Pitching Machine contact us at: **(800) 492-9334** or log on to our website at **www.HeaterSports.com**.



 
POWERALLEY 11" SOFTBALL PARTS LIST



Housing (Qty 1)



(D)
Thumb
Screw

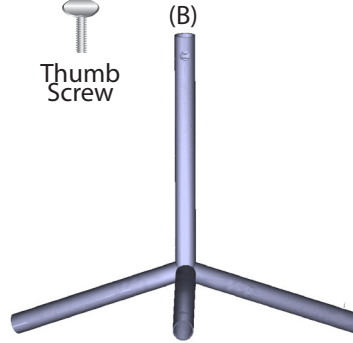

Tripod

 


Legs (Qty 3)



Top Pole

POWERALLEY 11" SOFTBALL ASSEMBLY

STEP 1: Slide Legs (A) into Tripod (B) base until push-pin snaps into place.

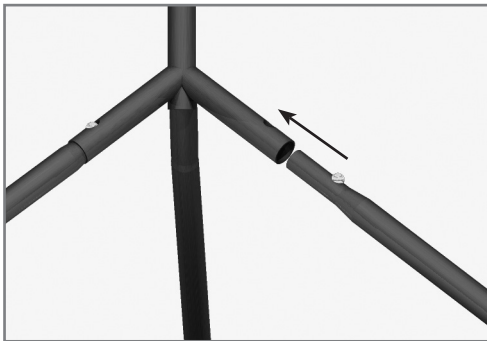


  STEP 2: Insert Top Pole (C) into Tripod (B) top until push-pin snaps into place. Thread Thumb Screw (D) in to threaded nut attached to opposite side of the push-pin hole.

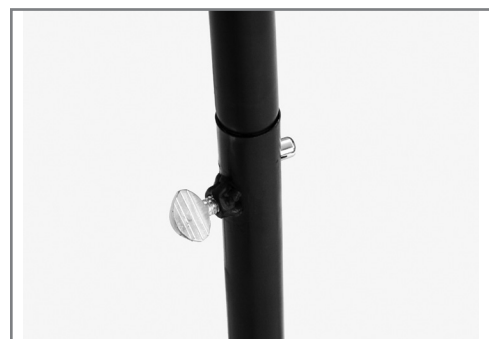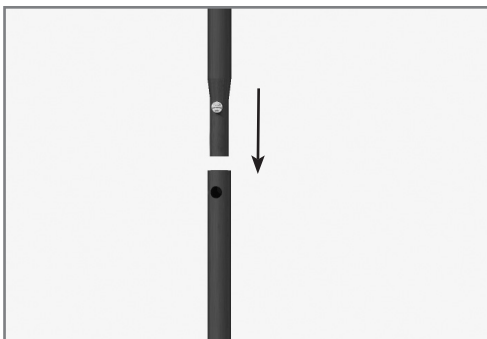

POWERALLEY 11" SOFTBALL ASSEMBLY (Continued)


 
STEP 3: Remove Thumb Knob & Washers from Pole Clamp assembly on Housing and slide the housing bolt through the Top Pole (C) holes.

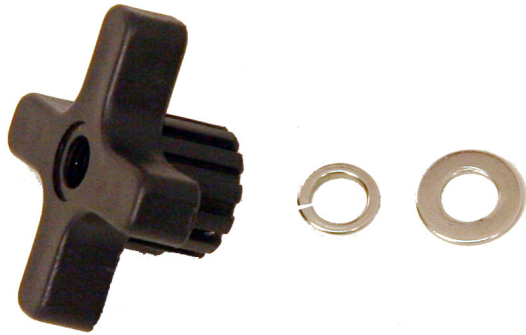

STEP 4: Replace the Washer, Lock Washer, Knob in that order and then tighten. (See Photo)

NOTE: MAKE SURE TO FACE THE MACHINE OPENING OVER THE FRONT LEG OF THE TRIPOD.

  THE TRIPOD WILL LEAN FORWARD AS SEEN IN THE IMAGE TO THE RIGHT. THIS GIVES THE MACHINE THE PROPER BALANCE.

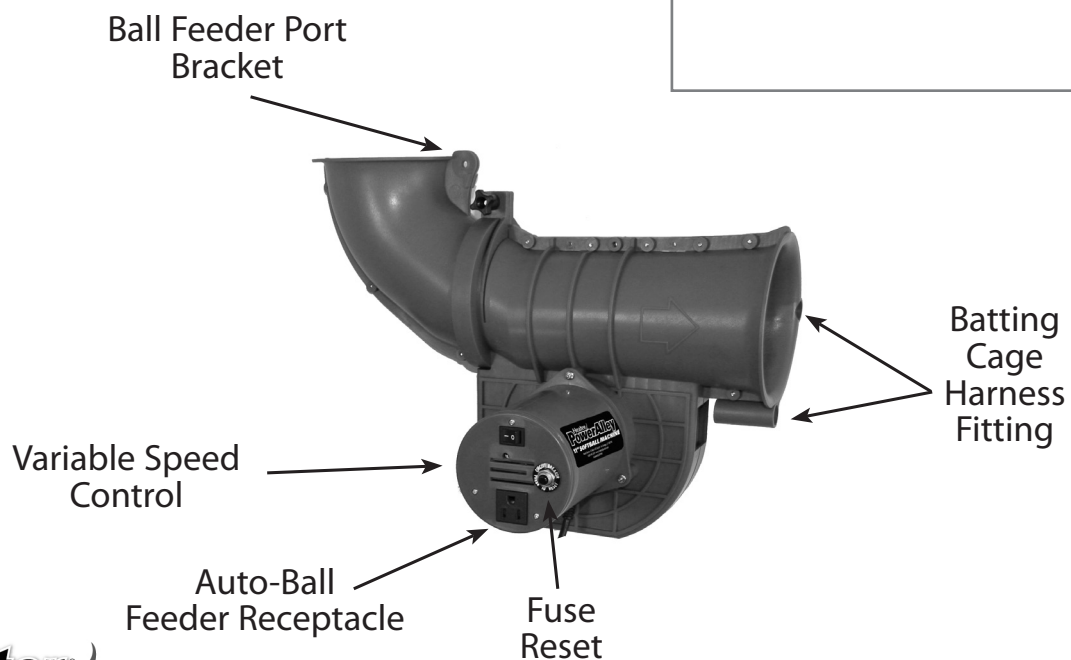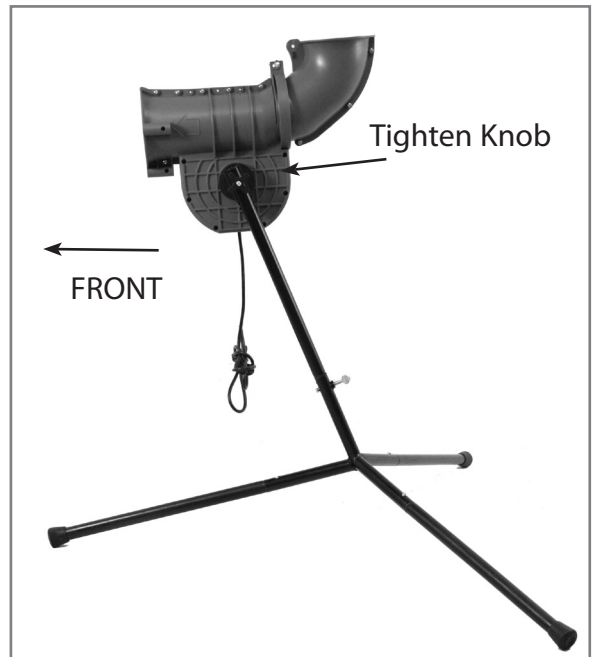

Heater[™] **PowerAlley** **REAL-SOFTBALL** **PITCHING MACHINE**

OPERATION INSTRUCTIONS

WARNING!

MAKE SURE NO PERSONS ARE IN FRONT OF MACHINE WHILE ADJUSTING THE MACHINE FOR FAST BALLS, POP FLIES, OR GROUNDERS.

CAUTION:

Different types of balls will change the pitch dramatically. Make sure no persons are in front of machine until machine is aimed properly and pitching accurately at desired target.

STEP 1: Before using the PowerAlley pitching machine, use the two Ground Stakes (E) to secure the machine in place.

STEP 2: Plug the PowerAlley into any standard wall outlet or portable power pack.

STEP 3: Turn machine on by adjusting speed control knob to the "2" position.

To adjust for different ball speeds, simply adjust the 0-10 knob (*Speed chart is located near speed control on machine*).

STEP 4: Before allowing batter to be in front of machine, make sure ball path is clear and place 11" softball in to chute of machine to pitch. Adjust speed and direction to desired position before batter attempts to bat.

STEP 5: To throw pop flies or grounders, loosen the thumb knob on the clamp support until the housing can rotate to the desired position.

Securely tighten the thumb knob back into place.

