



Read This Before Operating

IMPORTANT

**DO NOT RETURN THE SLIDER MACHINE TO THE RETAIL STORE WHERE PURCHASED.
CALL TOLL FREE: (800) 492-9334.**

WARNING: ONLY USE SLIDER LITE-BALLS IN THE Slider MACHINE

The Slider Lite-Ball Pitching Machine only uses Slider Lite-Balls. If you put real baseballs in the Slider Lite-Ball Machine you will damage the machine and void the Slider warranty. Heater Sports recommends only using official Slider Lite-Balls in your Slider Lite-Ball Pitching Machine. These balls are incredibly accurate, long lasting, and produce the best performance in the machine.

CUSTOMER SERVICE

HEATER SPORTS is dedicated to your customer satisfaction. If you experience any trouble with the operation of the Slider Pitching Machine contact us at: (800) 492-9334 or log on to www.HeaterSports.com.

WARNING: THIS PRODUCT IS TO BE USED BY ADULTS ONLY. MAKE SURE MACHINE IS TURNED OFF BEFORE ASSEMBLY! KEEP HANDS AND ALL BODY PARTS AWAY FROM BALL ENTRY AND EXIT! SERIOUS HAND, EYE, AND BODILY INJURY MAY OCCUR IF USED INCORRECTLY!

- Please be sure to read all of the instructions before using the Slider Lite-Ball Pitching Machine to insure the machine is working properly.
- Parents: Your child should be made aware of the potential dangers of using the Slider Lite-Ball Pitching Machine.
- Never put your fingers into the Slider Lite-Ball Pitching Machine.
- The Slider is not a toy and an adult should supervise children. It is very important the batter makes sure the area is clear before swinging a bat.
- Stay clear of the ball opening while the Slider is operating. Although the balls are very light, they may cause eye damage or other injury may occur. Children must be advised of this danger and appropriate precautions should be taken.
- **DO NOT** use any type of ball other than Slider Lite-Balls in this machine.
- Always use a NOCSE approved batting helmet when batting.
- **DO NOT LOOK INTO THE FRONT OF THE MACHINE WHILE THE SLIDER IS RUNNING.** Occasionally a ball may get stuck in the machine. The ball may pause and then shoot out and cause eye injury. If the ball gets stuck, turn off the machine immediately. You should be able to remove the ball easily by tilting the Slider backwards to eject the ball.
- Never operate in water or moisture.
- Always store in a dry area.



Model# SL129BB

SLIDER PARTS LIST



 
Top Leg Assembly (Qty 3)



Back Leg Assembly (Qty 1)



Bottom Leg Assembly (Qty 2)



(N)
Front
Leg Stakes (Qty 2)



(D)
Bolt (Qty 3)



(E)
Nut (Qty 3)



(K)
Housing (Qty 1)



(F)
Tri-Pod
Base (Qty 1)



(G)
Knob
(Qty 1)



(H)
Teeth
Washer
(Qty1)



 
(I)
Metal
Washer
(Qty 1)



(J)
Carriage
Bolt
(Qty 1)



(L)
Top Spiral (Qty 1)

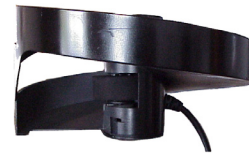

(M)
Spiral Ball Feeder (Qty 1)

SLIDER ASSEMBLY

STEP 1: Extend Part (B) until push-pin locks.



STEP 3: Extend Parts (C).



 
STEP 2: Slide Part (B) into Part (A) and lock push-pin into hole in Part (A).





STEP 4: Slide Part (C) into Part (A) and insert push-pin into hole in Part (A) (2X).






STEP 5: Slide the leg assemblies into the Tri-Pod Base (F) slots.

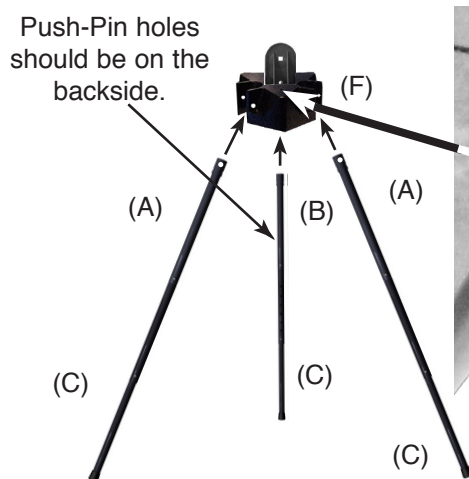

  STEP 6: Slide Part (D) (3X) through the holes in the Tri-Pod Base (F) slot holes and tighten nut (E) (3X).

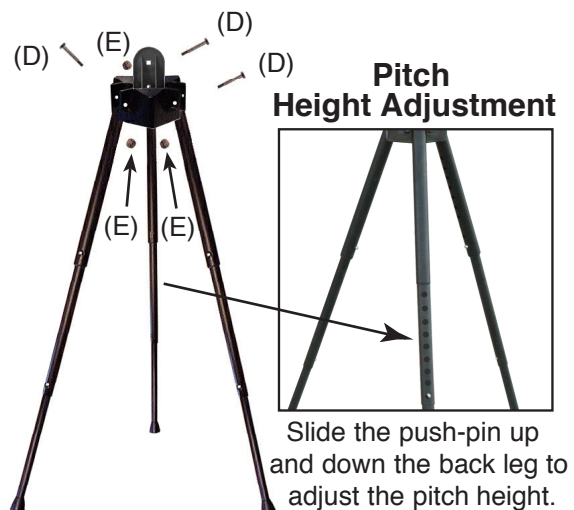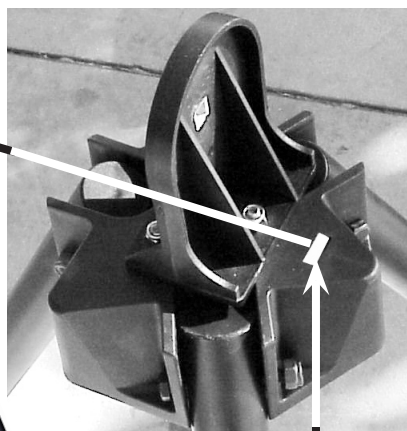

SLIDER ASSEMBLY (Continued)

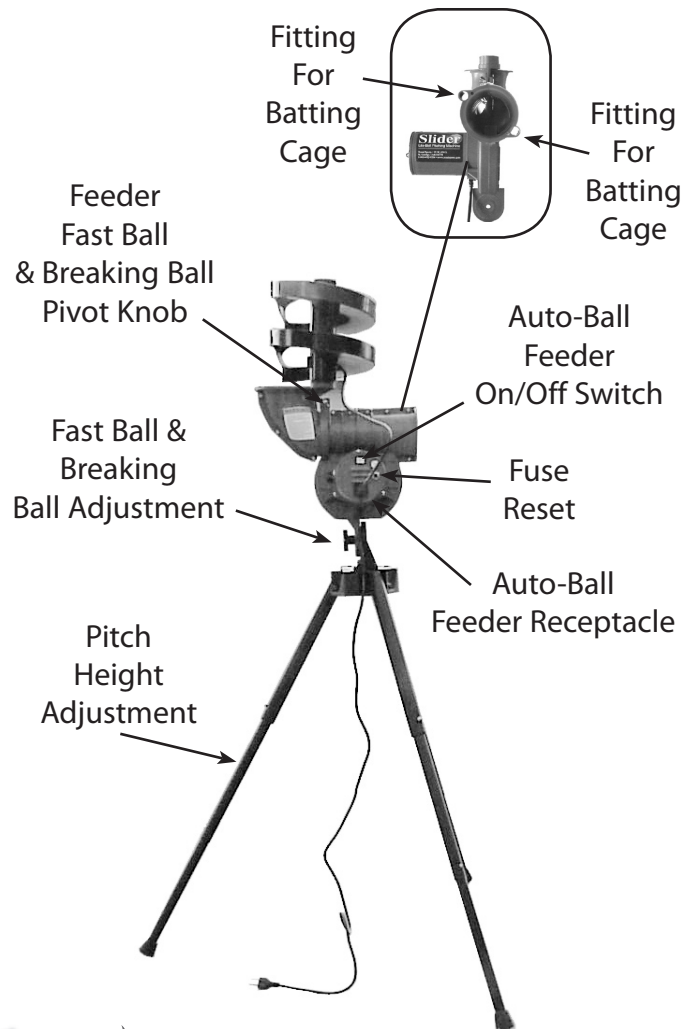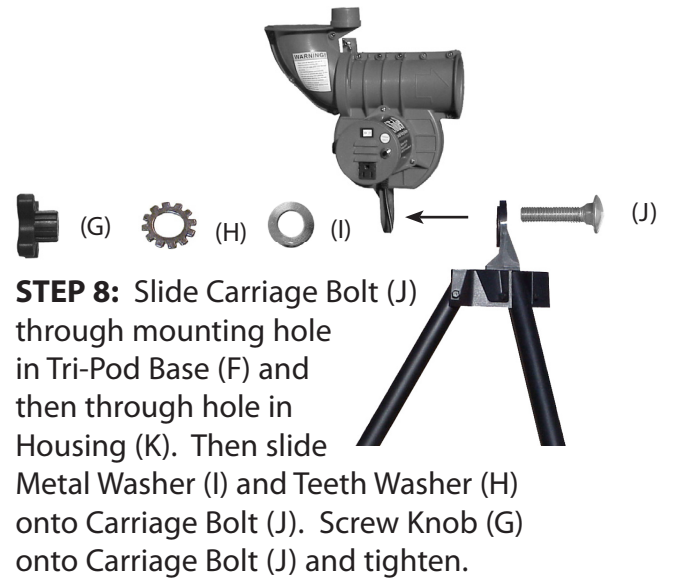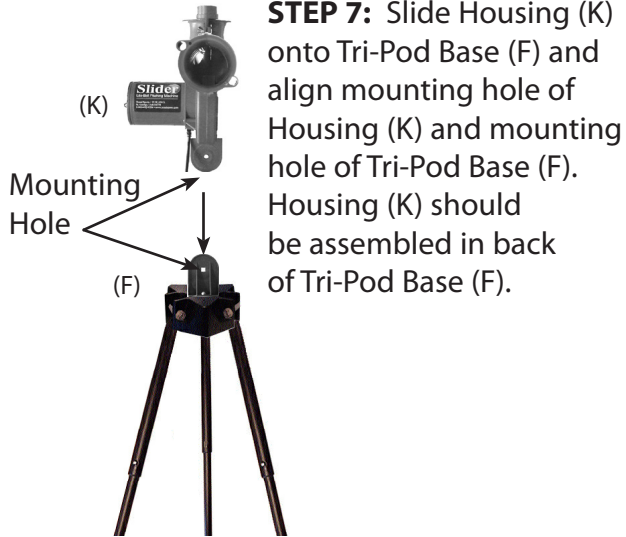   

Heater
SPORTS



 
Fast Ball/Curve Ball Instructions

WARNING!

ROTATING THE HEAD OF THE SLIDER FROM FAST BALL TO CURVE BALL POSITIONS CHANGES THE DIRECTION AND TRAJECTORY OF THE PITCHED BALL. MAKE SURE NO PERSONS ARE IN FRONT OF MACHINE WHILE ADJUSTING FOR FAST BALL OR CURVE BALL PITCHES.

CAUTION:

When machine is rotated for different pitch types, the ball direction changes dramatically. Make sure no persons are in front of machine until machine is aimed properly and pitching accurately at desired target.

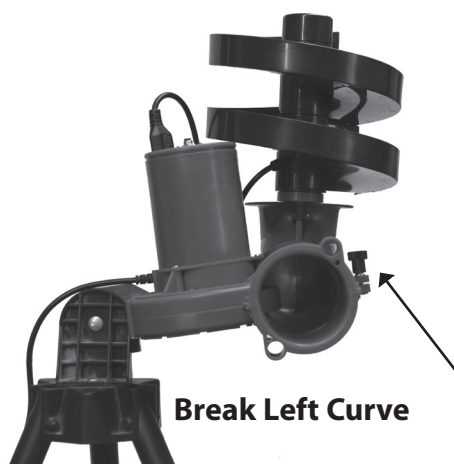

Break Left Curve

Ball Pitch Adjustment: Loosen the Ball Pitch Adjustment Knob where the tripod head and machine housing connect. Tilt the housing right or left for curve ball pitches.

Ball Feeder Adjustment: Loosen the Ball Feeder Knob to swivel the ball feeder to an upright position when pitching curve balls.



Break Right Curve



 
Fast ball Position

WARNING

When machine is pivoted for different pitch types, the pitch direction can move left or right by up to 30 feet. Use extreme caution when changing between pitch types. Never change pitch types with any person in front of machine.



ADDENDUM

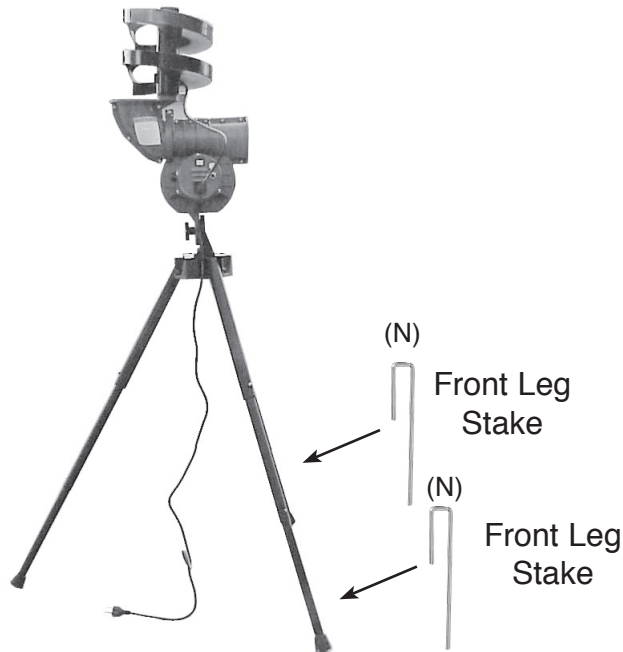

Front Leg Stakes

Slider Movement: The Slider may re-coil when a ball is pitched. This may cause the Slider to move slightly.

To stabilize the Slider, simply slide the hook of one Front Leg Stake (N) (2X enclosed) over each of the two front legs of the Slider and pound each stake into the ground. This will stabilize the movement of the Slider Lite-Ball Pitching Machine and eliminate re-coil movement.

